

VI.5.3D-PRTMAPE PROGRAM FCST HCL TECHNIQUE PRTMAPE

Purpose

Technique PRTMAPE sets whether Mean Areal Potential Evaporation (MAPE) values are to be printed.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

If Technique PRLASTDY has been set to 1 then the only data to be printed will be those for the last day of observed data and for the future or forecast days of the run period.

Form of Input

PRTMAPE (integer)

where integer is 1 or 0 specifying whether or not to print MAPE values

Example

PRTMAPE (1)

The MAPE values will be printed.